


**BG: Инструкции за Употреба на ДЕТСКИ АКУМУЛАТОРЕН
ВЛАК с 1*12V4.5Ah Батерия**

Модел: „TUTI” Артикулен Номер: 301

**EN: Instruction Manual For CHILDREN’S BATTERY OPERATED
TRAIN with 1*12V4.5Ah Battery**


Model: „TUTI” Item No.: 301

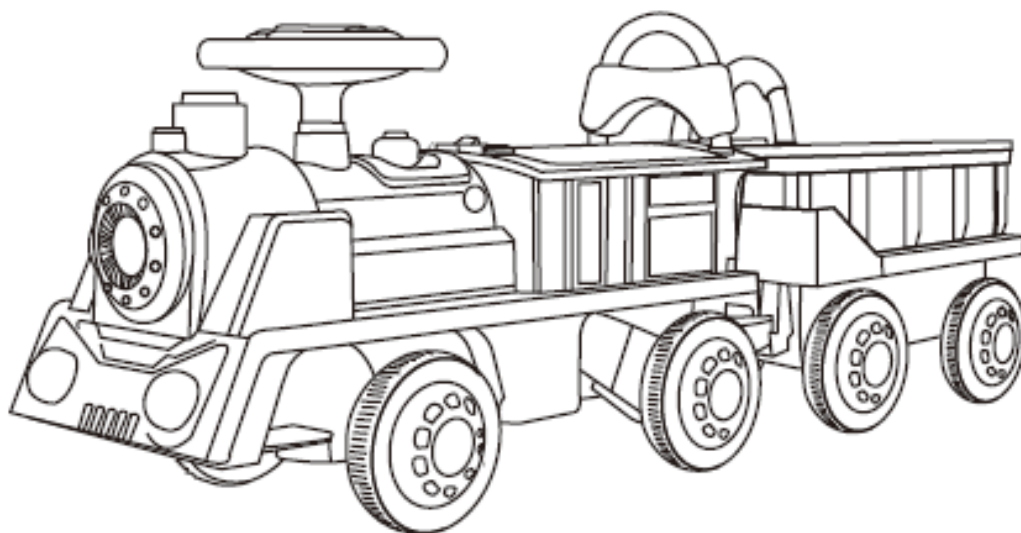

BG: ВАЖНО! ПРОЧЕТЕТЕ ВНИМАТЕЛНО И ЗАПАЗЕТЕ ЗА БЪДЕЩИ СПРАВКИ!
ИНСТРУКЦИЯТА ЗА УПОТРЕБА СЪДЪРЖА ВАЖНА ИНФОРМАЦИЯ ЗА СГЛОБЯВАНЕТО,
ПРАВИЛНОТО ИЗПОЛЗВАНЕ И ПОДДРЪЖКАТА НА ПРОДУКТА. АКУМУЛАТОРНИЯТ
ВЛАК ОТГОВАРЯ НА ИЗИСКВАНИЯТА НА ЕВРОПЕЙСКИ СТАНДАРТ EN 71-1-2-3.
ВНИМАНИЕ! СХЕМИТЕ И ФИГУРИТЕ В ТАЗИ ИНСТРУКЦИЯ СА САМО ИЛЮСТРАТИВНИ
И НАСОЧВАЩИ И ПРОДУКТЪТ, КОЙТО СТЕ ЗАКУПИЛИ МОЖЕ ДА СЕ РАЗЛИЧАВА ОТ
ТАХ.

EN: IMPORTANT! READ CAREFULLY AND KEEP FOR FUTURE REFERENCE!
THE USER MANUAL CONTAINS IMPORTANT INFORMATION ON THE ASSEMBLY,
CORRECT USE AND MAINTENANCE OF THE PRODUCT. THE BO TRAIN COMPLIES WITH
THE REQUIREMENTS OF EUROPEAN STANDARD EN 71-1-2-3.
WARNING! THE SCHEMES AND FIGURES IN THIS INSTRUCTION ARE FOR ILLUSTRATIVE
PURPOSES ONLY AND THE PRODUCT YOU HAVE BOUGHT MAY DIFFER FROM THEM.

ОПИСАНИЕ НА КОНСТРУКЦИЯТА / DESCRIPTION OF THE STRUCTURE

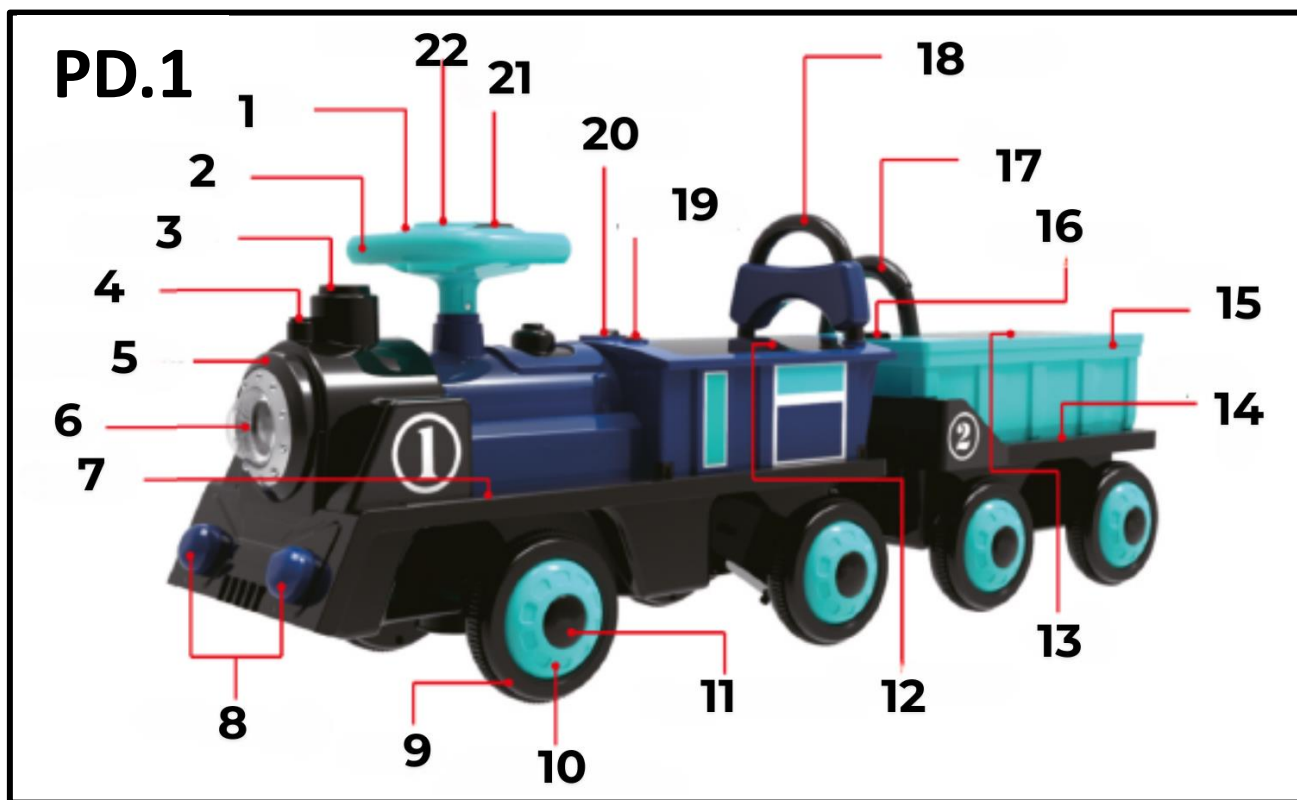

ОСНОВНИ ЧАСТИ - ЛОКОМОТИВ / MAIN PARTS – TRAIN

PD.2





ОСНОВНИ ЧАСТИ - ВАГОН / MAIN PARTS – TRAIN CARRIAGE









СТЪПКИ НА СГЛОБЯВАНЕ, УПОТРЕБА И ЗАРЕЖДАНЕ / ASSEMBLY STEPS, USE AND CHARGING





AG



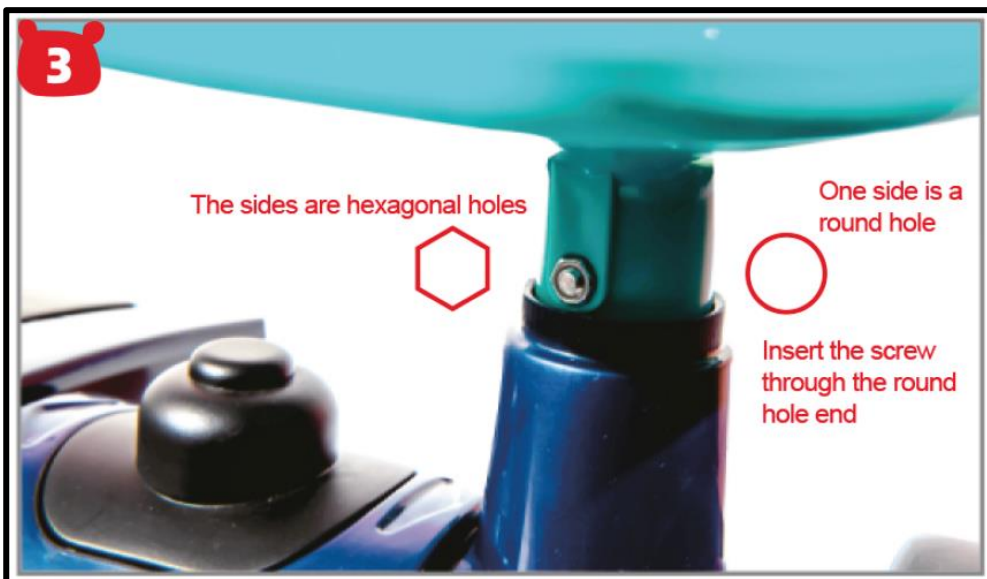
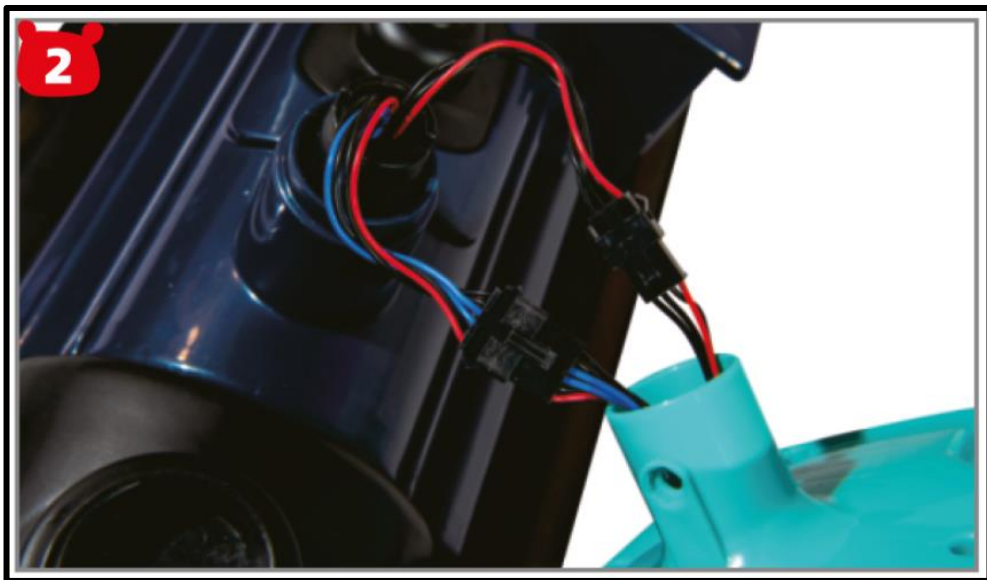


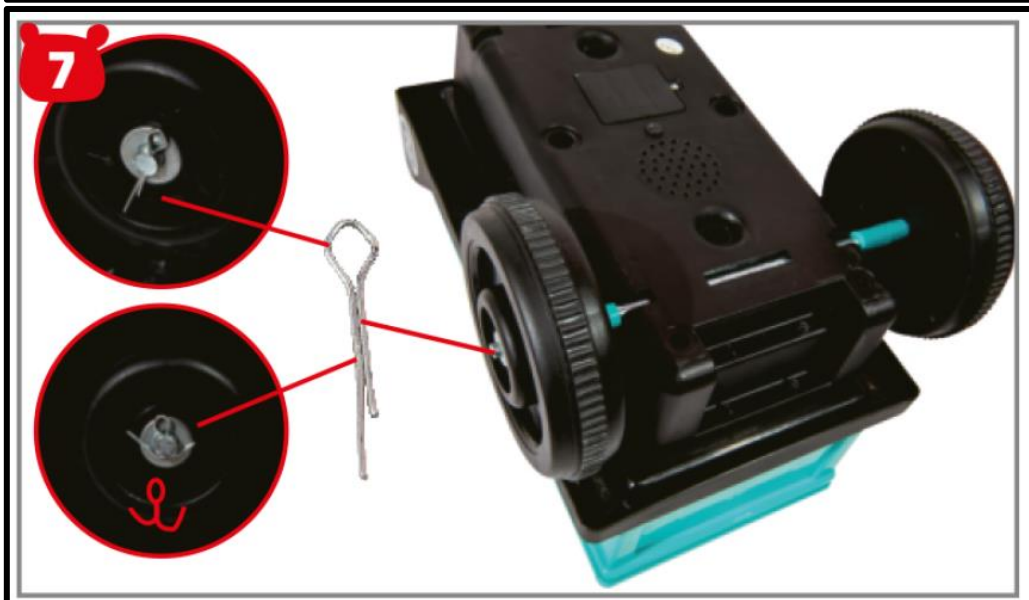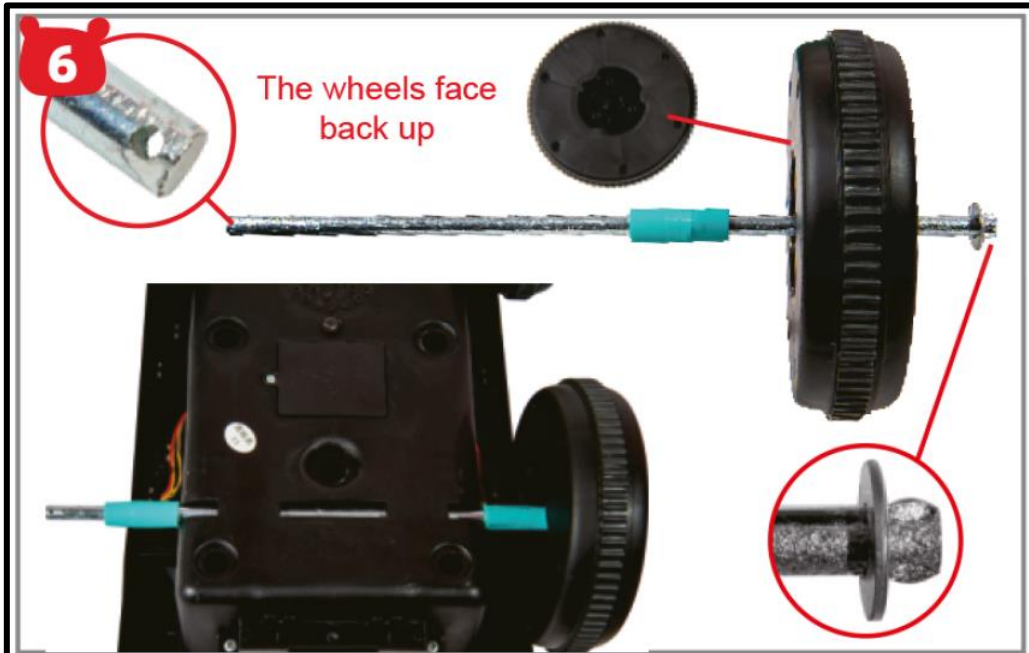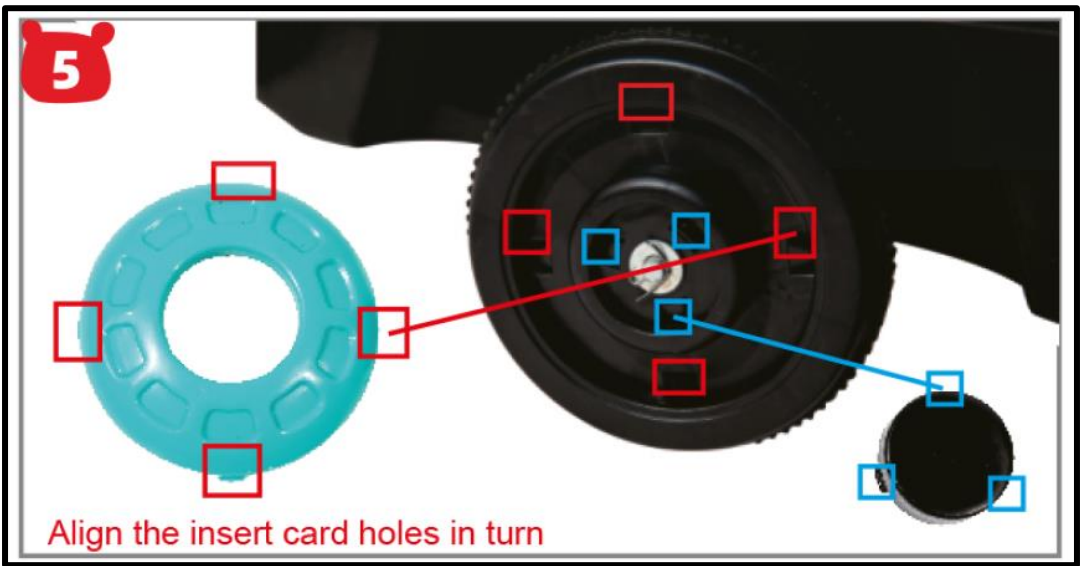

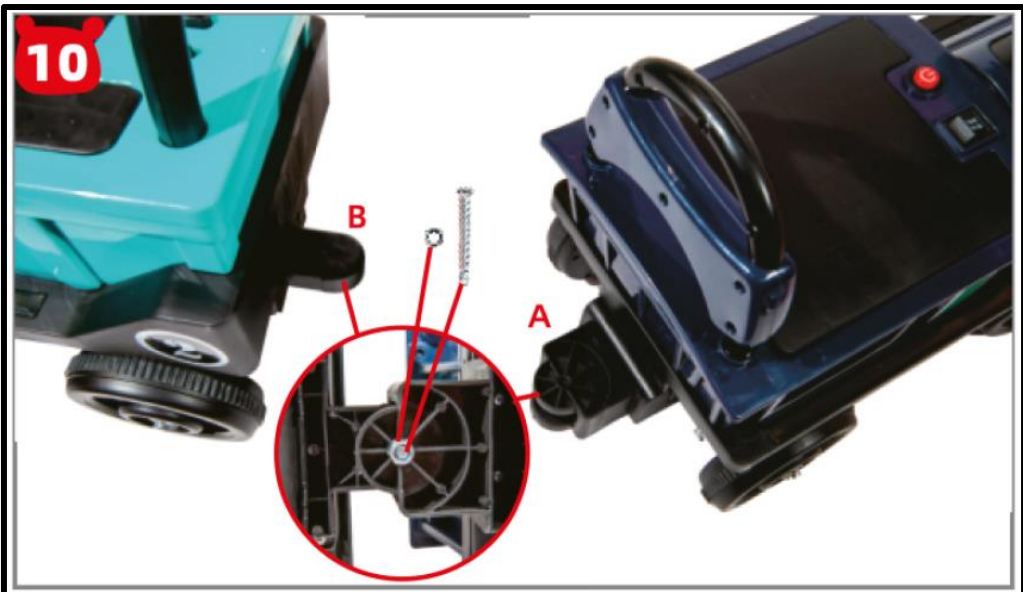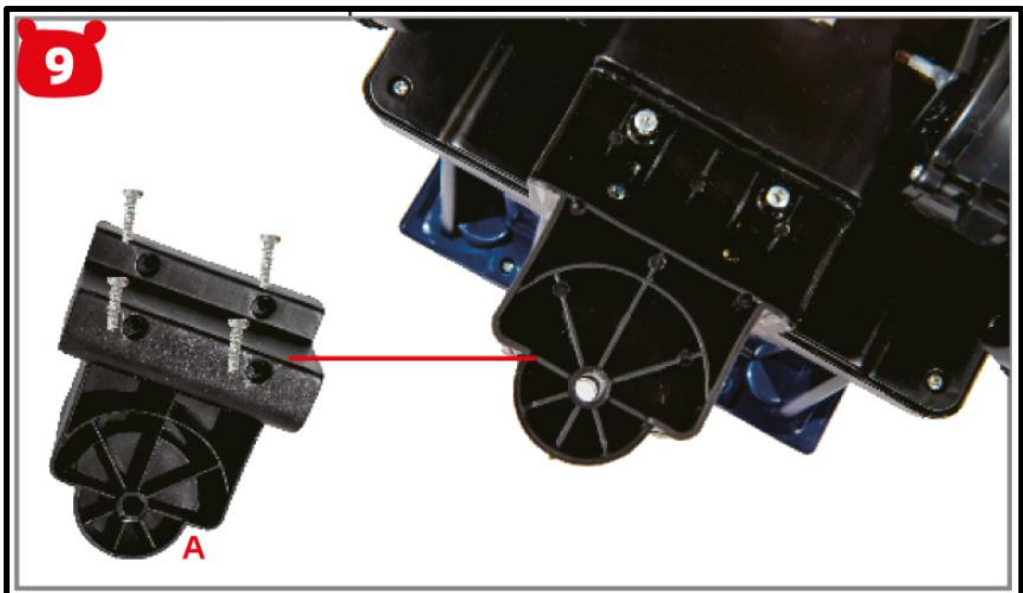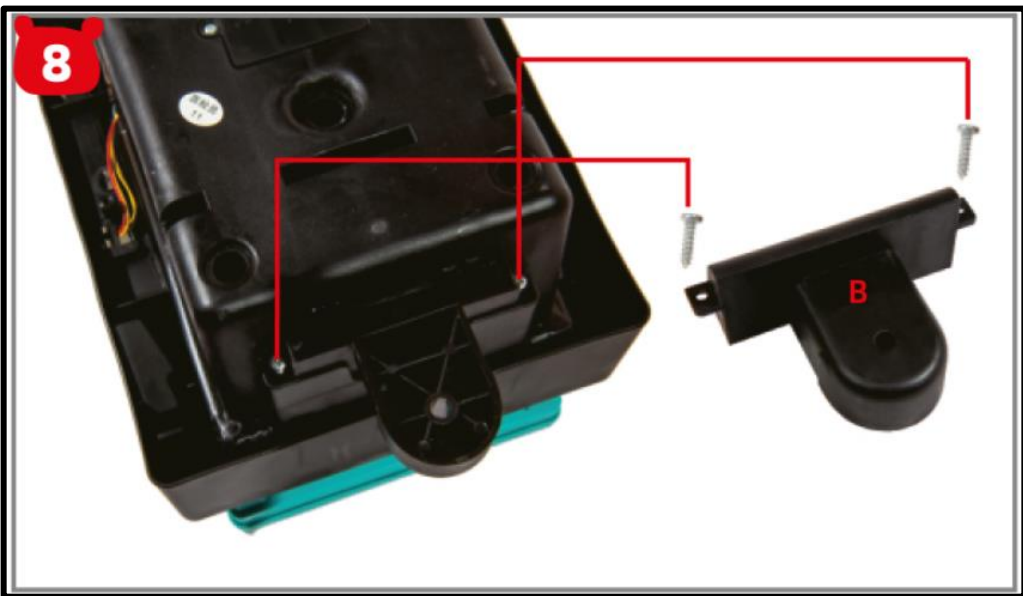

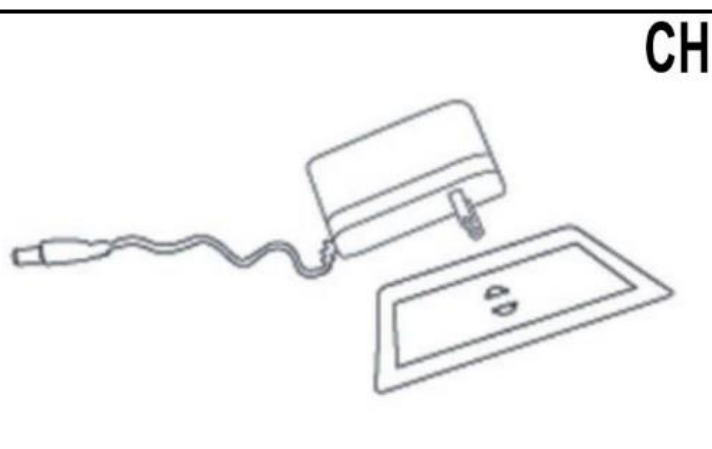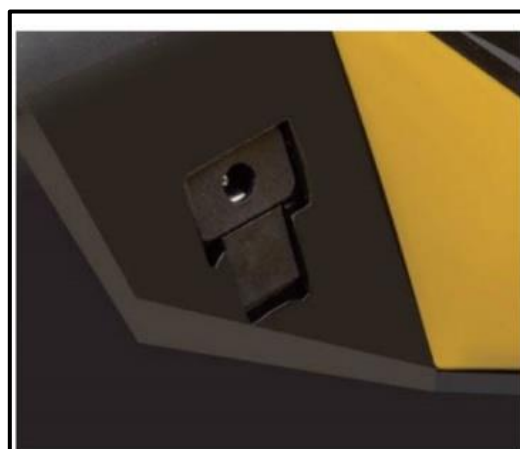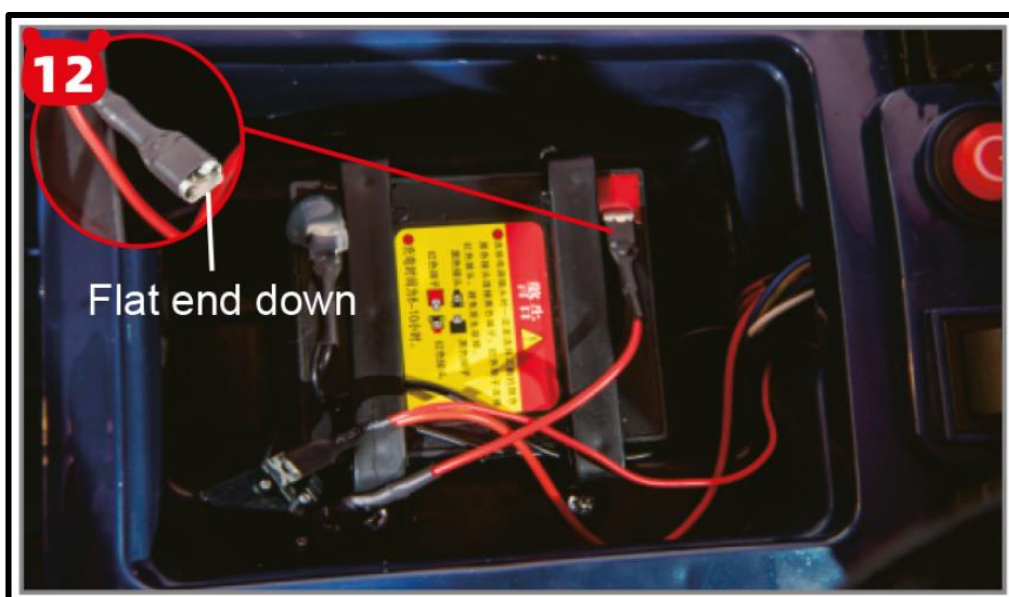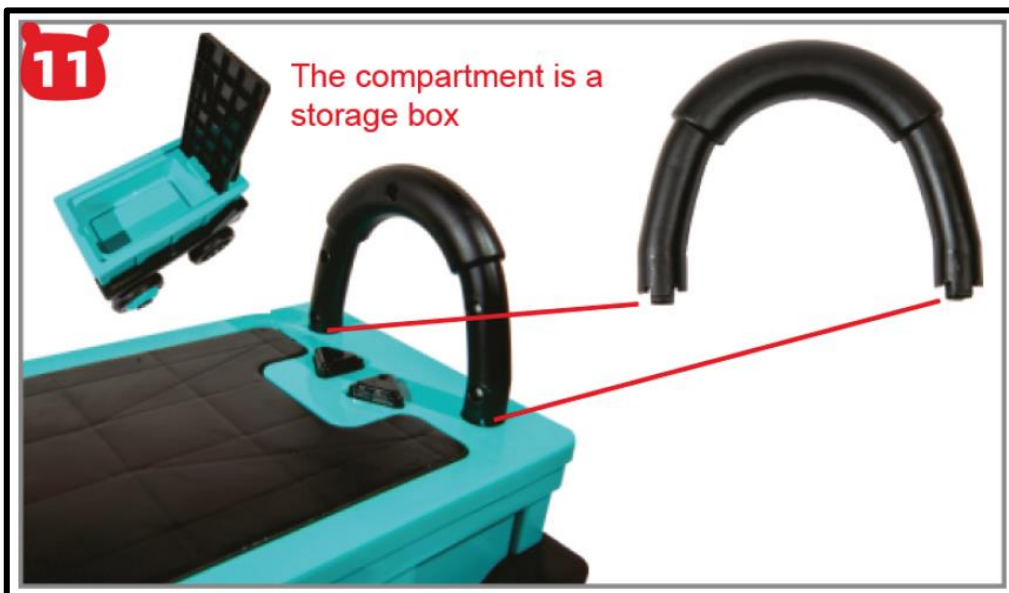

U

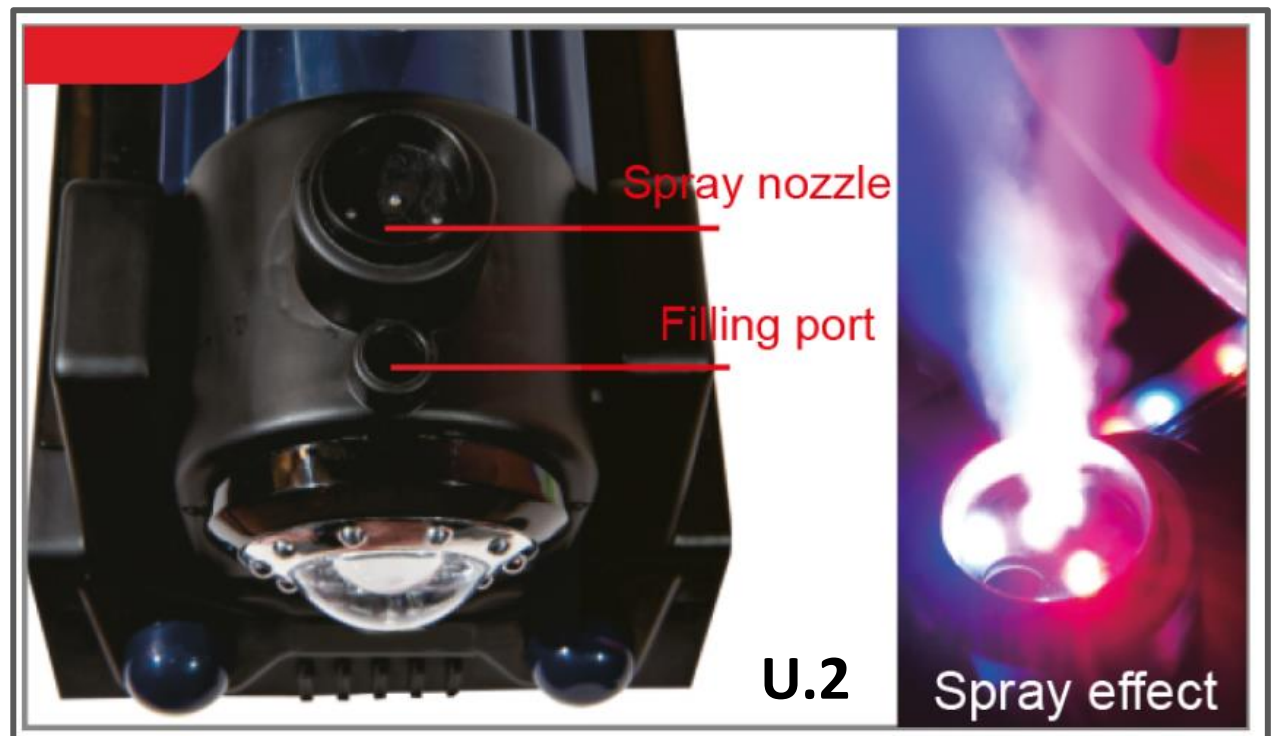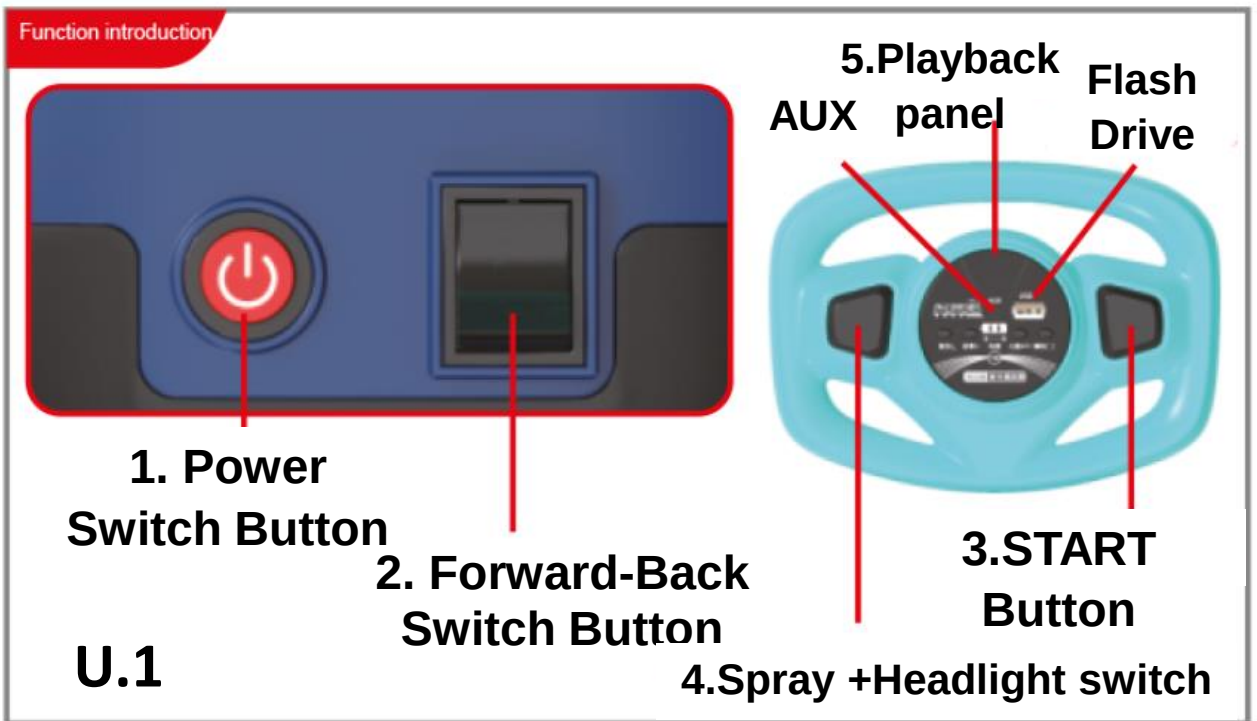

ВНИМАНИЕ!**• НЕ ИЗПОЛЗВАЙТЕ В КАЛНИ ТЕРЕНИ!!!!**

- **ИЗИСКВА СЕ СГЛОБЯВАНЕ ОТ СПЕЦИАЛИСТ.** Продуктът съдържа малки части, които трябва да бъдат сглобени само от възрастен. Дръжте децата настрана по време на сглобяването.
- Преди сглобяването винаги сваляйте предпазните материали и изхвърлете всички опаковки.
- **ОПАСНОСТ ОТ ЗАДАВЯНЕ** – Малки части. Не е подходящо за деца под 36 месеца.

СПЕЦИФИКАЦИИ

Максимална товароносимост:	50 кг	Подходяща възраст за употреба:	36 – 95 месеца
Среден живот на батерията:	Около 300 пъти на зареждане	Начин на захранване:	Чрез акумулаторна батерия
Батерия:	12V4.5Ah x 1	Зарядно:	Входящ: AC100-220V 50Hz Изходящ: DC6V
Време за Употреба:	45 – 60 минутиминути след пълно зареждане	Време за зареждане:	8 ~ 12 Часа

**СЕ МАРКИРОВКА И ЕО СЪОТВЕТСТВИЕ**

Детски акумулаторен влак TUTI е проектиран и произведен в съответствие с изискванията на европейската Директива 2009/48/ЕО относно безопасността на играчките. Играчката отговаря на изискванията на хармонизираните европейски стандарти: EN 71-1:2014+A1:2018; EN 71-2:2020; EN 71-3:2019+A1:2021; EN IEC 62115:2020+A11:2020.

ПРЕДВИДЕНА УПОТРЕБА

Акумулаторен влак TUTI (модел 301) е предназначен за деца на възраст от 36 до 95 месеца с тегло до 50 кг. Продуктът е проектиран за забавление и употреба в домашни условия. Предназначен е за ползване само от едно дете. Детето, което ще използва играчката за бутане, трябва да може да стои стабилно на краката си и да се придвижва самостоятелно.

ПРЕПОРЪКИ И ПРЕДУПРЕЖДЕНИЯ ЗА БЕЗОПАСНА УПОТРЕБА

- **Внимание!** Да се употребява само под пряк надзор от възрастен.
- **НИКОГА НЕ ОСТАВЯЙТЕ ДЕТЕТО БЕЗ НАДЗОР.** Винаги наблюдавайте детето, когато използва акумулаторния влак.
- **Внимание!** Тази играчка не е подходяща за деца под тригодишна възраст поради нейната максималната скорост. Играчката има малки части. Опасност от задавяне.
- **Внимание!** Тази играчка няма спирачка.
- **Внимание!** При употреба следва да се носят лични предпазни средства. Винаги да се носят обувки по време на употреба. Уверете се, че детето е с плътни обувки, които не са с хлъзгаща подметка.
- **Внимание!** Да не се използва по платното за движение на превозни средства.
- **Внимание!** Продуктът е проектиран да се кара от малки деца на равна и гладка настилка. Не използвайте продукта върху меки повърхности като трева, почва или пясък. Да се използва само на добре осветени и обезопасени пространства и площадки за игра. Да не се използва на мокри и хлъзгави настилки. Никога не позволявайте на детето да кара в близост до басейни, стълби, стръмни склонове.

Не използвайте в дъждовно време или вечер.

•Внимание! Продуктът трябва да се използва с повишено внимание! Необходими са определени умения, за да се избегнат евентуални падания или сблъсъци, които да причинят наранявания на детето. Преди да използвате акумулаторния влак, запознайте детето с начина на употреба. Уверете се, че детето разбира как функционира и може свободно да маневрира с влака в безопасна среда и под наблюдение.

•Внимание! Използвайте продукта само по предвиденото му предназначение. Ако детето ползва продукта по начин, различен от предвидената употреба, съществува риск от повреда, която може да доведе до наранявания. Да не се използва за пренасяне на товари. Да не се използва повече от едно дете едновременно. Винаги да се седи на седалката. Максимално допустимото тегло на детето, използващо влака е 50 кг.

•Не позволявайте на детето да стъпва върху седалката или да употребява акумулаторния влак, докато е в изправено положение.

•Важно! Преди употребата на продукта за първи път, батерията трябва да се зареди за 8 - 12 часа, но не повече от 16 часа. Само възрастен може да зарежда и презарежда батерията.

•Внимание! Движещи се части. Опасност от прищипване/заклеждане. Не позволявайте на детето, управляващо акумулаторния влак, както и на други деца, намиращи се в близост, да докосват ходовите колела с ръце или други предмети, докато са в движение.

•Изисква се сглобяване от възрастен.

•По време на сглобяването на влака, не трябва да има деца под 3 години в близост. Дребни части. Риск от задавяне.

•Дръжте опаковката на продукта на място, недостъпно за деца по време на разопаковането и след това.

•Поставянето и зареждането на батериите да се извършва само от възрастен.

•При удар внимателно прегледайте акумулаторния влак и неговите компоненти за евентуални неизправности, преди детето да я използва отново.

•Периодично проверявайте състоянието и целостта на отделните детайли, защото в случай на повреда е възможно нараняване на вашето дете. Не използвайте акумулаторния влак, ако установите, че има липсващи, разхлабени, износени или повредени части. Свържете се с търговския обект, от който сте закупили продукта, за резервни части. Не замествайте с части, които не са предоставени от производителя.

•ВАЖНО: Не променяйте нищо по конструкцията на продукта, което може да доведе до намаляване на безопасността на продукта. Не поставяйте и не връзвайте по играчката предмети или други аксесоари и връзки. Това може да предизвика закачане, омотаване и нарушаване на равновесието, вследствие, на което детето може да се нарани.

•Забранено е да съкращавате електрическите кабели или да добавяте други електрически части.

•При рестартирането на задвижващия мотор може да се появят искри. Забранено е да стартирате влака при силно възпламеними и експлозивни среди, като например бензиностанции.

•Когато не използвате повече играчката, спрете я от захранване.

СПИСЪК НА ЧАСТИТЕ

ВИЖТЕ ФИГУРА PD: Преди да започнете да сглобявате акумулаторния влак, извадете частите от опаковката. Проверете дали са налични всички. Запазете опаковките, докато завършите напълно сглобяването.

ФИГУРА PD.1 - ОПИСАНИЕ НА КОНСТРУКЦИЯТА: 1. Стартиращ бутон; 2. Кормило; 3. Разпръскваща дюза за пара на локомотива; 4. Контейнер за пълнене с вода; 5. Цветни светлинни ефекти; 6. Образователен музикален плеър; 7. Предни светлини; 8. Мигащи фарове; 9. Предни колела; 10. Образователен музикален плеър; 11. Тасове за колелата; 12. Отделение за акумулаторната батерия; 13. Вагонетка; 14. Светлинни ефекти; 15. Вагон; 16. Бутон за музика; 17. Ръкохватка; 18. Облегалка; 19. Бутон за включване/изключване; 20. Бутон за предвижване напред/назад; 21. Пара + Превключвател на светлините на фаровете; 22. Образователен музикален плеър.

ФИГУРА PD.2 - СПИСЪК С ОСНОВНИ ЧАСТИ НА ЛОКОМОТИВА: 1. Корпус на локомотива; 2. Кормило; 3. Облегалка; 4. Свързвач с вагона; 5. Крепежни елементи; 6. Зарядно устройство; 7. Декоративни тасове за колелата.

ФИГУРА PD.2 - СПИСЪК С ОСНОВНИ ЧАСТИ НА ВАГОНА: 8. Вагон; 9. Свързвач с локомотива; 10. Ръкохватка; 11. Предна и задна ос за сглобяване на колелата; 12. Предни и задни колела; 13. Декоративни тасове за колелата; 14; 15; 16 и 17. Части, спомагащи сглобяването.

ПРЕДИ СГЛОБЯВАНЕТО НА ПРОДУКТА

•Внимание! Опасност от нараняване. Малки части и остри ръбове. Не позволявайте на децата да играят с частите или да помагат при сглобяването.

•Заделете всички части преди сглобяването. Запазете всички опаковки, докато не приключите, за да не изхвърлите някоя част по невнимание.

ВНИМАНИЕ!

- **ИЗИСКВА СЕ СГЛОБЯВАНЕТО ДА СЕ ИЗВЪРШИ ОТ ВЪЗРАСТЕН.** Продуктът съдържа малки части, което налага сглобяването да се извърши от възрастен. Деца не трябва да присъстват по време на сглобяването.
- Свалете предпазните материали и опаковки и ги изхвърлете след сглобяването на продукта.
- Опаковката на влака не е играчка за децата. С цел да се избегне задушаване или смърт, пазете найлоновата опаковка на продукта далеч от децата.
- **Забележка:** Някои части може да са предварително фабрично сглобени.
- Уверете се, че бутонът за захранването е в позиция "OFF" преди сглобяването на влака.

СГЛОБЯВАНЕ НА ПРОДУКТА

- След всяка стъпка трябва да проверявате дали отделните части са правилно поставени и добре фиксирани.
- Следвайте стриктно отделните стъпки и разучете добре фигурите на сглобяване.
- **Не претягайте**, за да не повредите някоя част.
- 1. ПОСТАВЯНЕ НА ВОЛАНА – Вижте Фигури 1, 2 и 3:** Свалете фиксиращия винт и гайка от кормилния вал. Свържете буксата на кабелите на волана с тази на кабелите от таблото. Поставете волана на върха на кормилния вал и подравнете отворите им за фиксиращия винт. Промушете винта през отворите и с помощта на гайката и отвертка затегнете винта така, че воланът да се фиксира към вала.
- 2. МОНТИРАНЕ НА ОБЛЕГАЛКАТА НА ЛОКОМОТИВА – Вижте Фигура 4:** Сложете облегалката в задната част на корпуса на локомотива. Натиснете внимателно надолу, докато се фиксира.
- 3. МОНТИРАНЕ НА ТАСОВЕТЕ НА КОЛЕЛАТА НА ЛОКОМОТИВА – Вижте Фигура 5:** Поставете тасовете на колелата (в последователността черни-цветни). Щифтовете на тасовете трябва да влязат в съответните отвори на колелата. Натиснете тасовете внимателно, за да ги фиксирате.
- 4. МОНТИРАНЕ НА ПРЕДНИ И ЗАДНИ КОЛЕЛА НА ВАГОНА – Вижте Фигури 6 и 7:** Вземете предната ос и поставете на едната ѝ страна шайба и предно колело. Промушете оста през кормилния вал и поставете на другата страна на оста другото колело и шайба. Фиксирайте с помощта на шплинт. Вземете задната ос и поставете на едната ѝ страна шайба, задно колело и уплътнител. Промушете оста през отворите на задния предпазител. Поставете на другия край на оста уплътнител, задно колело и шайба. Фиксирайте с помощта на шплинт. Прикрепете тасовете на предните и задните колела в последователността черен – цветен. Натиснете внимателно, докато се фиксира към колелата. Ще чуете звук на щракване.
- 5. МОНТИРАНЕ НА ЕЛЕМЕНТИТЕ ЗА ПРИКАЧВАНЕ НА ВАГОНА КЪМ ЛОКОМОТИВА – Вижте Фигури 8, 9 и 10:**
 - Фигура 8: Монтирайте свързващия елемент на вагона В, като го поставите в предназначения отвор на отделението и го фиксирате с 2 винта.
 - Фигура 9: Монтирайте свързващия елемент на локомотива А, като го поставите в предназначения отвор на отделението и го фиксирате с 4 винта.
 - Фигура 10: Свържете двата монтирани елемента А на локомотива и В на вагона и ги фиксирайте с винт.
- 6. МОНТИРАНЕ НА РЪКОХВАТКА НА ВАГОНА – Вижте фигура 11:** Сложете ръкохватката в предната част на корпуса на вагонетката. Натиснете внимателно надолу, докато се фиксира.
- 7. СВЪРЗВАНЕ НА КАБЕЛИТЕ НА ВЛАКА С БАТЕРИЯТА – Вижте Фигура 12:** Първо свалете седалката като развийте фиксиращия винт с помощта на отвертка. След това намерете червения кабел на влака и го свържете с червената клема на батерията. Включете бутона за захранване на влака, за да проверите дали свързването е успешно. Ако ли да, поставете обратно седалката и я фиксирайте с винта. **ЗА ДА ИЗБЕГНЕТЕ ПОВРЕДА НА ЕЛЕКТРИЧЕСКАТА СИСТЕМА, НИКОГА НЕ СВЪРЗВАЙТЕ ЧЕРЕН КАБЕЛ КЪМ ЧЕРВЕНА КЛЕМА ИЛИ ЧЕРВЕН КАБЕЛ КЪМ ЧЕРНА КЛЕМА!**

УПОТРЕБА НА АКУМУЛАТОРЕН ВЛАК

- **ВИЖТЕ ФИГУРА U:** На нея са показани различните бутони и функции:
- **ФИГУРИ U.1 и U.2: Управление на влака; Пара на локомотива:**
- 1. Бутон за захранване:** Натиснете червения бутон, за да включите/ изключите управлението на влака.
- 2. Бутон – Превключвател за предвижване Напред/ Назад:**
 - За да се предвижи влакът напред: превключвателят за предвижване Напред/ Назад трябва да се постави в позиция напред и да се натисне стартиращия бутон на волана. Ако бутонът на волана се освободи, влакът спира да се движи.
 - За да се предвижи влакът назад: превключвателят за предвижване Напред/ Назад трябва да се постави в позиция назад и да се натисне стартиращия бутон на волана. Ако бутонът на волана се освободи, влакът спира да се движи.
- 3. Бутон за стартиране на движението на влака:** След избиране на посоката на предвижване Напред/ Назад се натиска бутон "Start" на волана. Чрез волана се регулира завиването наляво/ надясно. **ВНИМАНИЕ! ВАЖНО!** Винаги спирайте акумулаторния влак от движение, когато смените посоката, за да избегнете повреда на редукторите или моторите.
- 4. Бутон за пускане на пара на локомотива и предни светлини:** Бутонът за пара на локомотива е разположен на волана. Капацитетът на контейнера за вода е 200 ml (вижте фигура U.2).
- 5. Бутони за музика, намаляне или увеличаване на звука:** Воланът е оборудван с бутони за музика и светлини.
- 6. USB Извод** – за свързване с флаш памет или към вашия телефон.



Не слушайте силно музика, тъй като това може да доведе до увреждане на слуха.

ЗАРЕЖДАНЕ НА АКУМУЛАТОРНАТА БАТЕРИЯ – ВИЖТЕ ФИГУРА СН

Зареждането на батерията може да се осъществява само от възрастен!

ЗАРЕЖДАНЕ НА АКУМУЛАТОРНАТА БАТЕРИЯ НА ИГРАЧКАТА

ЗАРЕЖДАНЕТО НА АКУМУЛАТОРНАТА БАТЕРИЯ ТРЯБВА ДА СЕ ИЗВЪРШВА САМО ОТ ВЪЗРАСТЕН!

1. Преди употреба за първи път, трябва да зарядите батерията за 8 - 12 часа. Не презареждайте батерията за повече от 16 часа, за да избегнете прегряване на батерията и зарядното.
2. След всяка употреба или веднъж в месеца минимум трябва да зареждате акумулаторната батерия от 8 до 12 часа, но не повече от 16 часа.
3. **Преди да започнете да зареждате батерията, изключете влака от бутона за захранването.**
4. Когато нормалната скорост на играчката очевидно започне да се понижава или след всяко използване на продукта, зарядете батерията.
5. Проверявайте батерията, зарядното и техните букси и кабели за прекомерно износване или повреда всеки път преди да започнете да зареждате батерията. Ако откриете износване или повреда, не използвайте зарядното или батерията, докато не се смени износената или повредената част.
6. Зареждането на батерията трябва да става само в сухи зони.
7. Нормално е батерията и зарядното да се затоплят по време на зареждане.
8. Зареждайте батерията поне веднъж в месеца, дори когато количката не се използва.
9. При стайна температура под 5 градуса по Целзий, зареждането трябва да се удължи с 3-5 часа. Под - 5 градуса по Целзий, не използвайте този продукт.

10. ЗАРЕЖДАНЕ:

ВНИМАНИЕ!!!

• Използвайте само батерията и зарядното, които са препоръчани от производителя.

1. Изключете влака от ON/OFF бутона. Включете буксата на зарядното в контакта за зареждане.
2. Включете щепсела на зарядното към контакт от главната електропреносна мрежа. Батерията ще започне да се зарежда.

ВНИМАНИЕ

• ЗА ДА ПРЕДПАЗИТЕ ОТ ПОЖАР ИЛИ ТОКОВ УДАР:

- **НИКОГА НЕ** заменяйте батерията или зарядното с друга марка. Използвайки друга батерия или зарядно може да доведе до пожар или експлозия.
- **НЕ** използвайте батерията или зарядното за други продукти. Може да се стигне до прегряване, пожар или експлозия.
- **НИКОГА** не променяйте електрическата верига. Ако направите някакви промени по нея може да се стигне до късо съединение, пожар или експлозия или системата перманентно да се повреди.
- **НЕ** позволявайте на Вашето дете да зарежда батерията.
- **НЕ ПОЗВОЛЯВАЙТЕ ДА СЕ ОСЪЩЕСТВЯВА ДИРЕКТЕН КОНТАКТ МЕЖДУ КЛЕМИТЕ НА БАТЕРИЯТА. МОЖЕ ДА СЕ СТИГНЕ ДО ПОЖАР ИЛИ ЕКСПЛОЗИЯ.**
- При зареждане, дръжте батерията далеч от лесно запалими предмети.
- **Никога не** вдигайте батерията за жиците или зарядното. Може да възникне повреда по батерията и да се стигне до пожар. Вдигайте батерията **САМО** за кутията.
- По време на зареждането на батерията се получават експлозивни газове. Не зареждайте в близост до източници на топлина или възпламеними вещества. Зареждайте батерията **САМО** в добре проветрими помещения.
- При зареждане **не** обръщайте батерията наобратно.
- Винаги обезопасявайте и застопорявайте акумулаторната батерия с помощта на скобата. В противен случай батерията може да изпадне и да нарани детето, ако акумулаторното train се преобърне.
- Клемите на батерията, терминалите и свързаните с тях аксесоари съдържат олово и оловни съединения, химикали, които според Щата на Калифорния, САЩ, могат да причинят рак или заболявания на репродуктивните органи/ възпрепятстване на репродуктивността. **ВИНАГИ СИ МИЙТЕ РЪЦЕТЕ СЛЕД БОРАВЕНЕ С БАТЕРИЯТА.**

- С батерията трябва да борави само възрастен. Батерията е тежка и съдържа киселина. Изпускането на батерията може да доведе до сериозни наранявания.
- Не** позволявайте батерията да се изтощи напълно. Трябва да я презареждате след всяка употреба или веднъж месечно, ако не я използвате редовно.
- Преди да започнете да зареждате продукта трябва да проверите дали зарядното, батерията и кабелите са в добро състояние. Ако има някаква повреда по някоя от тези части, трябва да преустановите употребата им, докато се отстрани неизправността.
- Съвсем нормално е зарядното да се затопли по време на зареждане. Но ако зарядното е много горещо, трябва да преустановите зареждането и да проверите адаптора и батерията.
- Не отваряйте батерията. Тя съдържа оловна киселина и други химикали, които са токсични и корозивни.
- Не** отваряйте зарядното! Показващите се кабели и течащият по тях ток може да причинят токов удар.
- Преди да приберете акумулаторния влак за съхранение, трябва да го зарядите напълно. След това на всеки 3 месеца трябва да го зареждате, за да удължите живота на акумулаторната батерия.
- Контактът за зареждане се намира под кормилото на влака.
- Изключете **БУТОНА ЗА ЗАХРАНВАНЕ** преди да започнете да зареждате батерията.

СМЯНА НА БАТЕРИЯТА И ОТСТРАНЯВАНЕ НА ИЗТОЩЕНАТА



Вашата батерия в един момент ще загуби способността си да задържа заряд. В зависимост от количеството на употреба и вариращите условия, батерията би трябвало да може да се използва от една до три години. За да подмените батерията и да отстраните изтощената, следвайте следните стъпки:

1. Свалете седалката на акумулаторния влак.
2. Свалете буксите на кабелите, свързани към клемите на батерията.
3. Свалете металната скоба, предпазваща батерията от падане.
4. Свалете капака на отделението за батерията.
5. Внимателно вдигнете батерията.
6. В зависимост от състоянието на батерията (напр. протичане) може да се наложи да носите предпазни ръкавици преди да свалите батерията.
- Не вдигайте батерията за нейните клеми или кабели.
7. Поставете изтощената батерия в найлонова опаковка.
- Важно!** Запечатана оловно-киселинна батерия трябва да се рециклира или изхвърли по екологосъобразен начин с цел опазване на околната среда от замърсяване. Батерията съдържа оловна киселина (електролит) и трябва да се отстранява по екологосъобразен начин и според нормативните изисквания.
- НЕ** изхвърляйте акумулаторната батерия в огън, тъй като тя може да експлодира или да протече.
- НЕ** изхвърляйте оловно-киселинната батерия в кофите за битов отпадък. Инсинерацията (изгарянето), депонирането или смесването на запечатаните оловно-киселинни батерии с битовия отпадък е забранено от закона.
- Изтощената акумулаторна батерия може да се занесе за рециклиране в местния център по рециклиране или в център за продажба на такива батерии.
8. Подменете батерията с нова и свържете всички кабели и букси отново, както е описано в тази инструкция.
9. Поставете обратно металната скоба, предпазваща батерията от обръщане или изпадане.
10. Поставете обратно седалката на влака.

ПОДДРЪЖКА И ПОЧИСТВАНЕ НА ПРОДУКТА

❖ Почистване:

1. Не почиствайте продукта с маркуч. Не го мийте с вода и сапун. Не използвайте влака, когато вали дъжд или сняг. Водата може да повреди мотора, електрическата система и батерията.
2. Почиствайте акумулаторния влак само със мека суха кърпа. За да възстановите блясъка на пластмасовите части, използвайте полиращ препарат за мебели, който **НЕ СЪДЪРЖА** восък. Не използвайте силни абразивни почистващи препарати.

❖ Поддръжка и съхранение:

1. Отговорността е изцяло на родителите/ възрастен да провери главните части на играчката преди употреба. Редовно проверявайте за потенциален риск от повреда/ нараняване – батерията, зарядното, електрически кабели или жици, букси, винтове, корпус, задвижващи системи, колела, затягащи елементи – дали са в добро състояние или не, дали има някакви повреди, счупени или отчупени части. Ако откриете такива, преустановете употребата на продукта, докато се отстрани повредата. За консултация се свържете с търговския обект, от който сте закупили продукта или с вносителя.
2. Уверете се, че пластмасовите части на играчката не са пукнати или счупени.
3. От време на време използвайте смазочно масло, за да смажете движещите части като например колела и задвижващи връзки. Трябва да нанасяте много тънък слой от маслото и да внимавате при нанасянето му.

4. Съхранявайте влака само в изправено състояние, не го обръщайте наобратно и не го накланяйте. Паркирайте акумулаторния влак в затворено помещение или го покрийте с брезент, за да го предпазите от мокро време.

5. Когато не използвате продукта, трябва да го съхранявате на сухо, хладно и проветриво място. Не съхранявайте продукта в близост до източници на топлина – открит огън, отоплителни уреди или готварски печки, а също и на влажни места.

6. САМО ЗА ВЪЗРАСТНИ: презареждайте батерията след всяка употреба. Презареждайте батерията поне веднъж месечно, когато не използвате влака.

7. Когато не се използва акумулаторния влак, трябва всички електрически източници да са изключени. Всички превключватели трябва да са в нулево положение или в позиция "stop". Разкачете и буксите на кабелите на батерията.

8. Ако няма да се използва продукта за дълго време, трябва да заредите батерията напълно, преди да го приберете. А за да поддържате по-дълъг живот на батерията, трябва да я зареждате на всеки три месеца.

9. Преди да приберете влака за съхранение трябва да: поставите бутона за захранване в положение OFF, да извадите кабелите от всички букси и да извадите акумулаторната батерия от влака. Съхранявайте я на подходящо място (сухо, хладно и проветриво помещение). Не позволявайте на деца да играят в близост до батерията.

10. ВАЖНО! НЕ ПРАВЕТЕ ПРОМЕНИ ПО КОРПУСА НА ВЛАКА И ОСНОВНИТЕ МУ ЧАСТИ, А СЪЩО И ПО ЕЛЕКТРИЧЕСКАТА ИНСТАЛАЦИЯ! Това може да доведе до неизправности по влака, неправилен начин на работа и до риск от нараняване на Вашето дете. Поддържките на тези части трябва да се правят от нещо лице – оторизиран сервиз или вносител.

11. Не презареждайте непрезаредими батерии, не смесвайте стари с нови или различни видове батерии. Внимавайте за поляритета при поставяне на батериите.

12. Не променяйте структурата на този продукт и електрическата му система. Всякакви промени трябва да се извършват само под ръководството на техник. При проблеми се свържете с търговското лице, от което сте закупили продукта или вносителя.

ГАРАНЦИОННИ УСЛОВИЯ

I. ГАРАНЦИЯТА ОТПАДА И РЕКЛАМАЦИЯТА НЕ СЕ ОБСЛУЖВА БЕЗПЛАТНО КОГАТО:

• НЕ СТЕ ЗАПАЗИЛИ КАСОВАТА БЕЛЕЖКА И/ИЛИ ФАКТУРАТА.

• **НЕ СА СПАЗЕНИ УКАЗАНИЯТА ОТ ИНСТРУКЦИИТЕ ЗА СГЛОБЯВАНЕ, МОНТАЖ И ПРОФИЛАКТИКА.**

• **НЕ СА СПАЗЕНИ УКАЗАНИЯТА ОТ РЪКОВОДСТВОТО ОТНОСНО ПОДДРЪЖКАТА И ПРАВИЛНАТА УПОТРЕБА. ТАКИВА ПРИМЕРИ ЗА ИГРАЧКИ С АКУМУЛАТОРНА БАТЕРИЯ СА:** ЗАПУШВАНЕ НА ИЗВОДИТЕ ПО МУЗИКАЛНИЯ ПАНЕЛ С КИБРИТЕНИ КЛЕЧКИ, ХАРТИЯ ИЛИ ДРУГИ МАТЕРИАЛИ; КАРАНЕ В КАЛНИ УЧАСТЪЦИ, ЗАБЛАТЕНИ ЗОНИ, ПЯСЪК; ДИРЕКТНО ОБЛИВАНЕ НА ПРОДУКТА С ВОДА С ЦЕЛ ПОЧИСТВАНЕ.

СТОКАТА Е НЕПРАВИЛНО ИЛИ ЧАСТИЧНО СГЛОБЕНА.

• ИМА ПОВЪРХНОСТНИ НАРАНЯВАНИЯ, ПОЛУЧЕНИ ПО ВРЕМЕ НА ЕКСПЛОАТАЦИЯТА НА СТОКАТА, ПРИ ПРЕНАСЯНЕ, ТРАНСПОРТ ИЛИ СЪХРАНЕНИЕ.

ПОВРЕДАТА Е ВЪЗНИКНАЛА ВСЛЕДСТВИЕ НА НЕБРЕЖНА ЕКСПЛОАТАЦИЯ, ПРЕТОВАРВАНЕ, СЪХРАНЕНИЕ В НЕПОДХОДЯЩА СРЕДА.

• ПОВРЕДАТА Е ВЪЗНИКНАЛА ВСЛЕДСТВИЕ НА УПОТРЕБА НА СТОКАТА ЗА ЦЕЛИ, РАЗЛИЧНИ ОТ ПРЕДНАЗНАЧЕНИЕТО ѝ - НАПРИМЕР ЗА ТЕСТОВЕ, ДЕМОНСТРАЦИИ, ОТДАВАНЕ ПОД НАЕМ И ДР.

• СТОКАТА Е РЕМОНТИРАНА В НЕОПРАВМОЩЕН ОТ ПРОИЗВОДИТЕЛЯ СЕРВИЗ ИЛИ ОТ ДРУГИ ЛИЦА.

• ИМА ИЗВЪРШЕНА ПРОМЯНА ИЛИ МОДИФИКАЦИЯ НА КОНСТРУКЦИЯТА.

• ПОВРЕДАТА Е ПОЛУЧЕНА ВСЛЕДСТВИЕ НА МОНТИРАНИ ОТ ПОТРЕБИТЕЛЯ ЧАСТИ И АКСЕСОАРИ, РАЗЛИЧНИ ОТ СПЕЦИФИКАЦИЯТА НА СТОКАТА ПРИ ПРОДАЖБАТА.

• ДЕФЕКТИТЕ СА ПОЛУЧЕНИ В РЕЗУЛТАТ НА ВЪЗДЕЙСТВИЕ НА ВЪНШНИ СИЛИ – ПРИРОДНИ БЕДСТВИЯ, СЧУПВАНИЯ СЛЕД УДАР С ТЪВЪРД ПРЕДМЕТ ИЛИ КАТАСТРОФА, ПРОМИШЛЕНИ ИЗПАРЕНИЯ, АГРЕСИВНИ МИЕЩИ ПРЕПАРАТИ И ДР. ПОДОБНИ.

II. СЛЕДНИТЕ ЧАСТИ ПОДЛЕЖАТ НА АМОРТИЗАЦИЯ ПРИ НОРМАЛНАТА ЕКСПЛОАТАЦИЯ НА СТОКАТА И НЕ ПОДЛЕЖАТ НА ГАРАНЦИЯ – БУТОНИ, АКУМУЛАТОРНА БАТЕРИЯ, ГУМИ, ДИСТАНЦИОННО УПРАВЛЕНИЕ, ПЛАСТМАСОВИ ЧАСТИ, ПОВРЕДЕНИ ЧАСТИ В СЛЕДСТВИЕ НА ПРЕТОВАРВАНЕ.

ПРОИЗВЕДЕНО ЗА МОНИ

Производител и вносител: Мони Трейд ООД

Адрес: България, гр. София, кв. Требич, ул. Доло 1

Тел.: 02/ 936 07 90; web: www.moni.bg

WARNING!**•DO NOT USE IN MUDDY TERRAINS!!!!**

- **ADULT ASSEMBLY REQUIRED.** The product contains small parts, which are for adult assembly only. Keep children away when assembling.
- Always remove protective material and poly bags and dispose before assembly.
- **CHOKING HAZARD – Small parts.** Not suitable for children under 36 months.

SPECIFICATIONS

Load Capacity:	Under 50 kg	Suitable age:	36 – 95 Months
Average battery life:	Approximately 300 times	Power way:	Rechargeable battery
Battery:	12V4.5Ah x 1	Charger:	Input current: AC100-242V, 50Hz Output current: DC6V
Use time:	45 – 60 minutes after full charge	Charge time:	8 ~ 12 Hours

**Use the vehicle on generally level ground ONLY!****DO NOT Use the vehicle on Lawn space****CE MARKING AND EO CONFORMITY**

The battery-operated train **TUTI** has been designed and produced in compliance with the requirements of the European Toy Safety Directive 2009/48/EC. The product complies with the general and specific requirements of the following harmonised standards: EN 71-1:2014+A1:2018; EN 71-2:2020; EN 71-3:2019+A1:2021; EN IEC 62115:2020+A11:2020.

INTENDED USE

Battery-operated train TUTI (model 301) is designed for use by children from 36 till 95 months of age and maximum weight of the child up to 50 kg. The product is designed for play and home use. It is intended for use by one child only. The child who will use the train must be able to stand steady on their feet and move on their own.

WARNINGS AND RECOMMENDATIONS FOR SAFE USE

- **Warning!** To be used under the direct supervision of an adult.
- **NEVER LEAVE THE CHILD WITHOUT ADULT SUPERVISION.** Always monitor the child while it is using the battery-operated train.
- **Warning!** This toy is unsuitable for children under 3 years due to its maximum speed. The toy has many small part. Chocking hazards.
- **Warning!** This toy has no breaks.
- **Warning!** Protective equipment should be worn. One must always use shoes during use. Make sure your child wears sturdy, non-slip shoes.
- **Warning!** Not to be used in traffic.
- **Warning!** The battery-operated train has been designed to be driven by young children on flat and smooth surfaces. Do not use the product on soft surfaces such as grass, soil, or sand. To be used only in well-lit and safe playgrounds and secure areas. Do not use on wet or slippery surfaces. Never allow child to ride near pools and stairs. Do not use in rainy weather or in the evening.
- One must always sit on the seat. Do not allow the child to step on the seat or to use the battery-operated train, while standing up.

- Warning!** The product needs to be used with caution, since skill is required to avoid falls or collisions causing injury to the user or third parties. Before the first use teach your child how correctly to drive the train. Make sure the child understands how the battery-operated train works and can use it correctly and safely in a safe and supervised environment.
- Warning!** Use the train only for its intended purpose. If a child uses the train in a manner other than its intended use, there is a risk of damage that could lead to serious injury. Do not use to carry loads. Not to be used by more than one child at a time. The maximum permitted weight is up to 50 kg.
- The product has adjustable safety belts. Instruct the children to fasten their seat belts before use in order to guarantee their safety.
- Important!** Before use of the product for the first time, the battery must be charged around 8 - 12 hours, but no more than 16 hours. Only an adult can charge and recharge the battery.
- Warning!** Moving parts! Entrapment hazards! Do not allow the child, driving the train or other children in proximity, to touch the wheels with hands or other objects, when in motion.
- Adult assembly required.
- Children under 3 years of age are not to be present during assembly of the train. Small parts. Risk of choking.
- Keep the packing away from children during the unpacking and afterwards.
- The attachment and charging of the batteries must be made by an adult.
- In the event of an impact, carefully inspect the train and its components for possible malfunctions before the child uses it again.
- Do not use the toy if any parts are found to be missing, loosen, worn-out or damaged. Contact the shop from which you bought the product, for replacement parts, if needed. DO NOT substitute parts, which have not been provided by the manufacturer.
- Check regularly the condition of each part, since there is a risk of injuring your child in case of damage.
- Do not use the train if you find loosen, worn-out or damaged parts. The wheels should be moving freely.
- IMPORTANT:** Do not make any modifications to the product! Do not modify any part of the train body, because this might result in reducing the safety of the product! Do not place or tie any objects or other accessories and strings to it. This may cause hooking, entanglement, and loss of balance, resulting in injury to the child. Do not replace parts.
- The attachment and charging of the batteries must be made by an adult.
- In the event of an impact, carefully inspect the train and its components for possible malfunctions before the child uses it again.
- Do not use the toy if any parts are found to be missing, loosen, worn-out or damaged. Contact the shop from which you bought the product, for replacement parts, if needed. DO NOT substitute parts, which have not been provided by the manufacturer.
- Check regularly the condition of each part, since there is a risk of injuring your child in case of damage.
- Do not use the train if you find loosen, worn-out or damaged parts. The wheels should be moving freely.
- IMPORTANT:** Do not make any modifications to the product! Do not modify any part of the train body, because this might result in reducing the safety of the product! Do not place or tie any objects or other accessories and strings to it. This may cause hooking, entanglement, and loss of balance, resulting in injury to the child. Do not replace parts.
- Do not shortcut the battery terminals.
- Sparks may occur when restarting the drive motor. It is forbidden to start the motor in highly flammable and explosive environments, such as gas stations.
- When you stop using the toy, turn off the power.

PARTS OF THE PRODUCT

SEE FIGURE PD: Before you start assembling the train, take all the parts from the packing. Check if all the parts are available. Keep the packages until you finish completely the assembly.

FIGURE PD.1 – DESCRIPTION OF THE STRUCTURE: 1. Start button; 2. Steering wheel; 3. Spray nozzle; 4. Filling port; 5. Colourful running lights; 6. Early learning player; 7. Headlights; 8. Flashing lights; 9. Front wheels; 10. Early learning player; 11. Wheel covers (caps); 12. Battery holder; 13. Stash; 14. Strip light; 15. Train's carriage; 16. Music switch; 17. Handlebar; 18. Backrest; 19. Power switch; 20. Gear button; 21. Spray + Headlights switch; 22. Early learning player.

FIGURE PD.2 – LIST OF MAIN PARTS OF THE TRAIN: 1. Train's Body; 2. Steering wheel; 3. Backrest; 4. Connector to trains' carriage; 5. Connection screws; 6. Charger; 7. Decorative wheel covers.

FIGURE PD.2 – LIST OF MAIN PARTS OF THE TRAIN'S CARRIAGE: 8. Train's Carriage; 9. Connectors to train; 10. Handlebar; 11. Front and rear axle; 12. Front and rear wheels; 13. Decorative wheel covers; 14, 15, 16 and 17 Parts supporting the assembly.

WARNING!

- **AN ADULT MUST PERFORM THE ASSEMBLY.** The product contains small parts, which is the reason the assembly must be performed by an adult. Children must not be present during assembly.
- Remove the safety materials and packaging and throw them after the product is assembled.
- The packaging of the train is not a toy for children. For the purpose of avoiding suffocation or death, keep the plastic packaging away from children.
- **Note:** Some parts might be pre-assembled in the factory.
- Make sure that the power button is in an “OFF” position before assembly of the train.

ASSEMBLY STEPS

- **Warning! Risk of injury.** Small parts and sharp edges. Do not allow the children to play with any of the parts or to help in the assembly of the vehicle.
 - Identify all parts before assembly and save all packing material until assembly is complete to ensure that no parts are discarded.
 - After each step you must check if each part is correctly placed and well fixed.
 - Follow strictly each step and study well the assembly figures.
 - **DO NOT** over-tighten in order to avoid any damage.
- 1. INSTALL THE STEERING WHEEL – See Figures 1, 2 and 3:** Remove the fixing screw and nut from the steering fork. Connect the cable connector of the steering wheel to the train's cables from the dashboard. Place the steering wheel on top of the steering fork and align their openings for the fixing screw. Thread the screw through the openings and using the nut and screwdriver tighten the screw in order to firmly fix the steering wheel to the steering fork.
 - 2. INSTALL THE BACKREST OF THE MAIN TRAIN'S BODY – See Figure 4:** Place the backrest in the back part of the train body. Press carefully down until it is fixed.
 - 3. ATTACH THE WHEEL COVERS OF THE TRAIN'S WHEELS (LOCOMOTIVE) – See Figure 5:** Attach the wheel covers to the wheels. The pins of the covers must enter the corresponding openings in the wheels. Press carefully to fix the covers.
 - 4. INSTALL THE FRONT AND REAR WHEELS OF THE CARRIAGE – See Figures 6 and 7:** Take the front axle and slide on one of its side washer and front wheel. Slide the axle through the steering column and attach to its other side a wheel and a washer. Fix the wheel using a split pin. Take the rear axle and attach to one of its side washer, wheel and bushing. Slide the rear axle through the openings in the rear anti-tumble shelf. Attach to the other side of axle bushing, rear wheel and washer. Fix using a split pin. Place the wheel covers to the front and rear wheels in the sequence black – colourful. Press gently until they are fixed to the wheels. You will hear a clicking sound.
 - 5. ATTACH THE TRAIN'S CARRIAGE TO THE TRAIN – See Figures 8, 9 and 10:**
 - Figure 8: Install the carriage coupler B by inserting it into the intended compartment opening and securing it with 2 screws.
 - Figure 9: Install the coupler on the A-coach by inserting it into the intended compartment opening and securing it with 4 screws.
 - Figure 10: Connect the two fitted elements A on the locomotive and B on the carriage and fix them with a screw.
 - 6. INSTALL THE HANDLEBAR TO THE TRAIN'S CARRIAGE – See Figure 11:** Place the handlebar in the front part of the carriage body. Press carefully down until it is fixed.
 - 7. CONNECT THE POWER SUPPLY – See Figure 12:** First remove the seat by unscrewing the fixing screw with a screwdriver. Then connect the red cable to the red battery terminal. Turn on the power button to check if there is electricity and if the connection is successful. If yes, re-attach the seat and fix it with the plastic button. **TO AVOID DAMAGE OF THE ELECTRIC CIRCUIT, DO NOT CONNECT BLACK CABLE TO RED TERMINAL OR RED CABLE TO BLACK TERMINAL!**

HOW TO OPERATE THE BO TRAIN

- **See Figure U** - On it are shown the different buttons: **FIGURES U.1 and U.2: Driving function; Spay function:**
- 1. POWER Button:** Turn the power on and off.
 - 2. FORWARD/BACKWARD Switch Button:**
 - To move the train forward, switch the button to position **Forward** and press the start button on the steering wheel. If you release the start button on the steering wheel, the train will stop moving.
 - To move the train backward, switch the button to position **Back** and press the start button on the steering wheel. If you release the start button on the steering wheel, the train will stop moving.
 - 3. Start button on the steering wheel:** After selecting the Forward/Backward direction of the train, press the start button on the steering wheel to move the train forward/backward. When turning the steering wheel you control the turning left and right of the train. **WARNING!** Always stop the train when changing the direction of movement or the speed in order to avoid damage of the gearboxes or motors.
 - 4. Locomotive steam button and headlights switch:** The locomotive steam button is located on the steering wheel. The capacity of the water container is 200 ml (see Figure U.2).
 - 5. Buttons for music, volume up and down:** The steering wheel is equipped with buttons for music and sounds.
 - 6. USB jack** – to connect flash driver or your phone.



Do not put the player or your phone close to the ears and do not listen to loud music, because this may lead to impairment of the hearing.

CHARGING THE BATTERY – SEE FIGURE CH

ONLY AN ADULT CAN CHARGE AND RECHARGE THE BATTERY!

THE RECHARGEABLE BATTERY MUST BE CHARGED BY AN ADULT ONLY.

1. Before use for the first time you must charge the rechargeable battery for 8 - 12 hours. Do not charge more than 16 hours to avoid overheating of the battery and charger.
2. Charge battery after each use or at least once a month for 8 to 12 hours but not more than 16 hours.
3. **Switch OFF the POWER BUTTON before charging.**
4. When the normal speed of the train starts to significantly decline or after each use of the product, charge the battery.
5. Check the battery, charger and their connectors and cables for extensive wearing or damage every time before you start charging the battery. If you find any wearing or damage, do not use the charger or battery until the worn or damaged part is replaced.
6. The battery must be charged in dry areas only.
7. It is normal for the battery and charger to become warm during charging.
8. Charge the battery at least once a month, even if the train has is not being used.
9. At room temperature under 5 degrees Celsius, the charging must take 3-5 hours more. Do not use this product under - 5 degrees Celsius.
10. **CHARGING:**

WARNING!!!

- Use only the battery and charger, which are provided from the manufacturer.

1. Turn off the train. Plug the charger port into the charging socket on the train.
2. Plug the charger plug into a wall outlet. The battery will begin charging.

WARNING

•IN ORDER TO AVOID FIRE AND ELECTRIC SHOCK:

- **NEVER USE** battery or charger of other brand or another product. Always use only the rechargeable battery and adapter provided with the bought product.
- Do not place the battery or adapter for another product. This may result in overheating, fire or explosion.
- **NEVER** change the electric current. Making any changes to it may lead to short circuit, fire or explosion or the system may permanently get damaged.
- **Do not allow** Your child to charge the battery.
- **DO NOT ALLOW** DIRECT CONTACT BETWEEN THE TERMINALS OF THE BATTERY. THIS MAY LEAD TO FIRE OR EXPLOSION.
- During the charging of the battery explosive gases, heat or flammable substances accumulate. Charge the battery in well ventilated places **ONLY**.
- Never pick up the battery by its cable or adapter. This may lead to damaging of the battery resulting in a fire. Pick the battery by the corpus **ONLY**.
- Do not turn the battery backwards.
- Always secure and fasten the rechargeable battery with the bracket. Otherwise the battery can fall and injure the child, if the battery-operated train upturns.
- The battery terminals, connectors and parts related to them contain lead and lead components, chemicals, which according to the state of California can cause cancers and reproductive disabilities. **Always wash your hands after handling the battery.**
- Only an adult can handle and charge the battery. The battery is heavy and contains lead acid (electrolyte). Dropping the battery may lead to permanent damage of the battery or serious injuries.
- Do not let the battery discharge entirely. You must recharge it after each use or once a month if you are not going to use it regularly.
- Before you start charging the product you must check whether the adapter, battery and cables are in good working order. If there is damage on any of these parts, you must stop using them, until the damage is removed.
- It is normal for the adapter to get heated during charging, but if the adapter gets very hot, you must stop the charging and check the adapter and battery.
- Do not open the battery. The battery contains lead acid and other materials, which are toxic and corrosive.
- Do not open the adapter! The exposed wires and electric components of the adapter may cause electric shock.
- Before you put the battery-operated train in storage, you must charge its battery completely. After that every 3 months you must charge it, in order to prolong its life.

WARNING

•IN ORDER TO AVOID FIRE AND ELECTRIC SHOCK:

- NEVER USE** battery or charger of other brand or another product. Always use only the rechargeable battery and adapter provided with the bought product.
- Do not place the battery or adapter for another product. This may result in overheating, fire or explosion.
- NEVER** change the electric current. Making any changes to it may lead to short circuit, fire or explosion or the system may permanently get damaged.
- Do** not allow Your child to charge the battery.
- DO NOT ALLOW DIRECT CONTACT BETWEEN THE TERMINALS OF THE BATTERY. THIS MAY LEAD TO FIRE OR EXPLOSION.**
- During the charging of the battery explosive gases, heat or flammable substances accumulate. Charge the battery in well ventilated places **ONLY**.
- Never pick up the battery by its cable or adapter. This may lead to damaging of the battery resulting in a fire. Pick the battery by the corpus **ONLY**.
- Do not turn the battery backwards.
- Always secure and fasten the rechargeable battery with the bracket. Otherwise the battery can fall and injure the child, if the battery operated train upturns.
- The battery terminals, connectors and parts related to them contain lead and lead components, chemicals, which according to the state of California can cause cancers and reproductive disabilities. **Always wash your hands after handling the battery.**
- Only an adult can handle and charge the battery. The battery is heavy and contains lead acid (electrolyte). Dropping the battery may lead to permanent damage of the battery or serious injuries.
- Do not let the battery discharge entirely. You must recharge it after each use or once a month if you are not going to use it regularly.
- Before you start charging the product you must check whether the adapter, battery and cables are in good working order. If there is damage on any of these parts, you must stop using them, until the damage is removed.
- It is normal for the adapter to get heated during charging, but if the adapter gets very hot, you must stop the charging and check the adapter and battery.
- Do not open the battery. The battery contains lead acid and other materials, which are toxic and corrosive.
- Do not open the adapter! The exposed wires and electric components of the adapter may cause electric shock.
- Before you put the battery operated train in storage, you must charge its battery completely. After that every 3 months you must charge it, in order to prolong its life.
- The charging socket is situated under the handlebar of the train.
- During charging the train is not usable, because the current of the electric system is stopped.
- When the battery operated train starts moving more slowly, you must recharge the battery.
- After each use or at least once a month you must recharge the rechargeable battery between 8 and 10 hours, but **NOT MORE** than 18 hours.
- Switch OFF the POWER BUTTON before charging.**
- Do not shortcut the battery terminals.
- The charger and the battery are not toys. Do not allow the children to play with the charger and the battery.
- Use only the battery and charger, which are recommended by the factory.

REPLACING OF THE BATTERY AND DISPOSAL OF THE EXHAUSTED BATTERY



Your battery at one point will lose its ability to hold charge. Depending on the amount of use and varying conditions, the battery should be used between one and three years. In order to replace the battery and remove the discharged one, follow the steps below:

1. Remove the seat of the battery operated train.
 2. Remove the jacks of the battery's cables.
 3. Remove the metal bracket that protects the battery from falling.
 4. Remove the lid of the battery compartment.
 5. Carefully lift the battery.
 6. Depending on the state of the battery (for example leakage) you may have to wear protective gloves before you remove the battery.
 - Do not lift the battery by its terminals or cables.
 7. Place the discharged battery in a plastic packaging.
- **Important!** The sealed lead-acid battery must be recycled or thrown away in an ecologically friendly manner for the purpose of avoiding pollution of the environment. The battery contains lead acid (electrolyte) and must be discarded in an ecologically friendly manner in accordance with the regulatory requirements.

- **DO NOT** throw the rechargeable battery away in fire, because it may explode or leak.
 - **DO NOT** throw the lead-acid battery in the containers for household waste. The incineration (burning), land filling or mixing of the sealed lead-acid batteries with the household waste is forbidden by law.
 - The discharged rechargeable battery can be given at the local recycling center for recycling or at a center for sale of such batteries.
8. Replace the battery with new one and reconnect all cables and terminals.
 9. Place the metal bracket protecting the battery from upturning or falling back on.
 10. Return the seat of the battery operated train back in place.

CLEANING AND MAINTENANCE OF THE PRODUCT

❖ Cleaning:

1. Do not clean the product with a hose. Do not wash it with water and soap. Do not use the train, when it rains or snows. Water may damage the motor, electric system or battery.
2. Clean the battery-operated train with soft, dry cloth only. In order to restore the shine of the plastic parts, use polishing agent for furniture **WITHOUT** wax. Do not use strong abrasive cleaning agents.

❖ Maintenance and storage:

1. The responsibility to check the main parts of the toy before use is entirely to the parents/ adult. Regularly check for potential risk of damage / injury – the battery, adapter, electric cables or wires, bushings, screws, body, moving systems, wheels, fastening components – whether they are in good working condition or not, whether there is any damage, broken or chipped parts. If you find any, you must stop using the product, until the damage is removed. Contact the shop you bought the product from or the importer.
2. Make sure that the plastic parts of the toy are not cracked or broken.
3. From time to time use lubricating oil, in order to oil the moving parts such as wheels and moving connections. You must apply a very thin layer of the oil and be careful while applying it.
4. Store the train in upright position only, do not turn it upside down and do not tilt it. Park the battery-operated train indoors or cover it with sailcloth, in order to protect it in humid weather.
5. When you are not going to use the product, you must store it at a dry, cool and well ventilated place. Do not store the product close to sources of heat – open fire, heating devices or cookers and also at humid places.
6. **FOR ADULTS ONLY:** recharge the battery after each use. Recharge the battery at least once a month, when you are not using the battery-operated train.
7. When the battery-operated train is not being used, all electric sources must be switched off. All switches must be in zero position or in “stop” position. Disconnect the bushings of the battery’s cables.
8. If you are not going to use the product for a long time, you must charge the battery completely, before you put it for storage. You must charge the battery every three months in order to prolong its life.
9. Before you put the train for storage you must switch the power button OFF, remove the cables from all bushings and the rechargeable battery of the train. Store it at a suitable place (dry, cool and well ventilated place). Do not allow children to play close to the battery.
10. **IMPORTANT!** DO NOT MAKE ANY CHANGES OF THE BODY OF THE train AND ITS MAIN PARTS AND ALSO THE ELECTRIC INSTALLATION! This may lead to damaging of the train, improper operation and a risk of injury to the child. These parts must be maintained by an expert – authorized repair shop or importer.
11. Do not charge non-rechargeable batteries, do not mix old and new or different types of batteries. Observe the correct polarity while placing the batteries.
12. Do not change the structure of this product and its electric system. Any changes must be performed under the guidance of a technician only. In case of a problem contact the shop you bought the product from or the importer.

MADE FOR MONI

Manufacturer and Importer: Moni Trade Ltd.

Address: Bulgaria, city of Sofia, Trebich quarter, Dolo str. 1

Tel.: +359 2/ 936 07 90; web: www.moni.bg